

MAINTENANCE AND OVERHAUL MANUAL

Continental Models A50, A65, A75 and A80 Aircraft Engines



OPERATION, MAINTENANCE OVERHAUL INSTRUCTIONS AND PARTS LIST

MARCH, 1944

REVISED JANUARY, 1946

REVISED FEBRUARY, 1948

MUSKEGON, MICHIGAN, U. S. A.

Copyright 1948 Continental Motors Corporation

WARRANTY

THE AIRCRAFT ENGINE DIVISION of Continental Motors Corporation warrants each new engine or part to be free from defects in material and workmanship when properly installed and used under normal conditions for ninety days, or in no case to exceed fifty (50) hours of operation after the shipment of each engine or part from the plant. This warranty is limited to replacing or repairing at its shops, any part or parts which have been returned to the Aircraft Engine Division with transportation charges prepaid, and which, in its opinion, are defective. This warranty is expressly in lieu of all other warranties and representations, expressed or implied, and all other obligations or liabilities on the part of the Aircraft Engine Division of Continental Motors Corporation.

This warranty does not cover any labor charges for replacement of parts, adjustments, repairs or any other work done on Continental Aircraft engines or parts.

This warranty shall not apply to any engine or part which shall have been repaired or altered outside of our factory in any way so as, in our judgment, to affect its operation, or which has been subject to misuse, negligence or accident, or which shall have been operated at a "speed exceeding the factory rated speed."

The Aircraft Engine Division of Continental Motors Corporation makes no warranty with respect to ignition apparatus, carburetors, instruments or other trade accessories, inasmuch as they are usually warranted specially by their respective manufacturers.

The Aircraft Engine Division of Continental Motors Corporation reserves the right to change engine or parts specification or prices without incurring any responsibility with regard to engines or parts previously sold or replaced.

CONTINENTAL MOTORS CORPORATION

Aircraft Engine Division

MUSKEGON, MICHIGAN, U.S.A.

INTRODUCTION

THIS book is a combined Operator's Manual, Maintenance and Overhaul Manual and Illustrated Parts and Price List for the Continental A50, A65, A75, and A80 series 8 and 9 engines.

This manual is intended for use by operators and mechanics as a guide and reference book in the operation and servicing of these engines.

The book is divided into five main groups: Operating and Maintenance Instructions, Overhaul Instructions, Table of Limits, the Illustrated Parts List, and Accessories.

It is suggested that a careful study be made of this manual. A strict adherence to the instructions outlined herein will assure a fine operating record. However, if any point is not entirely clear, do not hesitate to contact the nearest Authorized Continental Service Station or the factory Service Department.

In the event of failure of any engine part, notify the nearest Authorized Continental Service Station at once, giving the engine serial number, and full particulars. Do not attempt any repairs without factory permission if any adjustment is expected.

CONTINENTAL MOTORS CORPORATION
Muskegon, Michigan

TABLE OF CONTENTS

	Page
Section 1 — Table of Specifications	1
Section 2 — General Description	4
1. Differences Between Engine Models	4
2. Cylinder Construction	5
3. Valve Operating Mechanism	5
a. General	5
b. Hydraulic Tappets	5
4. Crankshaft Construction	6
5. Crankcase and Oil Sump Construction	6
6. Connecting Rods	6
7. Piston and Piston Pin Construction	6
8. Crankcase Cover	7
9. Lubricating System	7
10. Fuel Injector	7
OPERATING AND MAINTENANCE INSTRUCTIONS	10
Section 3 — Packing, Unpacking, and Preparation for Storage	10
1. Shipping Boxes	10
2. Packing	10
3. Unpacking the Engine	10
4. Treatment of Engines for Periods of Idleness	11
5. Preparation of Engines for Service after Treatment	11
Section 4 — Installation in Airplane and Removal	12
1. Engine Mounting	12
2. Engine Removal	13
Section 5 — General Operating Instructions	16
1. Procedure Preliminary to Starting	16
2. Starting	16
3. Warm-up and Ground Test	16
4. Take-off	17
5. Flight	17
6. Landing	17
7. Stopping	17
8. Carburetor Heat Control	17
9. Mixture Control	17
10. Gasoline and Oil Recommendations	18
Section 6 — Engine Troubles and Service Repairs	18
1. Failure of Engine to Start	18
2. Low Oil Pressure	18
3. High Oil Temperature	19
4. Low Power	19
5. Rough Running	19
6. Engine Fails to Accelerate Properly	19
7. Engine Fails to Idle Properly	19
Section 7 — Service Inspection and Associated Maintenance	19
1. General	19
2. Inspection and Maintenance	19

CONTINENTAL A50, A65, A75, A80 ENGINES

TABLE OF CONTENTS — Continued


	Page
Section 8 — Adjustment, Replacement, and Minor Repair	21
1. General	21
2. Carburetor	21
3. Magnetos	22
4. Magneto Installation and Timing to the Engine	22
5. Ignition Wiring	22
6. Removal of Parts	23
7. General Inspection	23
8. Reassembly	24
 OVERHAUL INSTRUCTIONS	 25
Section 9 — Disassembly, Cleaning and Inspection	25
1. General	25
2. Preliminary Operations	25
3. Disassembly	25
4. Cleaning	27
a. General	27
b. Cleaning of Engine Parts	27
5. Inspection	28
a. General	28
b. Inspection of Engine Parts	28
Section 10 — Repair and Replacement	30
1. General	30
2. Repair and Replacement of Engine Parts	31
Section 11 — Reassembly, Final Assembly, Timing and Testing	33
1. General	33
2. Reassembly of Major Sub-Assemblies	33
3. Final Assembly Procedure	34
4. Testing Engine After Overhaul	41
Section 12 — Table of Limits	45
 ILLUSTRATED PARTS LIST	 48
Section 13 — Introduction	48
Section 14 — Group Assembly Parts List	51
Section 15 — Numerical Parts List	79
Section 16 — Oversize and Undersize Parts	82
 ACCESSORIES	 83
Section 17 — Stromberg NA-S3A1 Carburetor	83
Service Instructions	83
Service Parts List	86
Section 18 — Bendix-Scintilla Magneto	88
Service Instructions	88
Service Parts List	91
Section 19 — Wilcox Rich Hydraulic Lifters	95
Service Instructions	95

CONTINENTAL A50, A65, A75, A80 ENGINES

INDEX FOR ILLUSTRATIONS

Figure No.	Title	Page No.
1	Three-Quarter Left Front View of A65-8	vii
1a	Three-Quarter Left Front View of A65-8F	vii
2	Three-Quarter Right Rear View of A65-8F	viii
3	Left Side View (A65-8F)	ix
3a	Right Side View (A65-8F)	ix
4	Performance and Fuel Consumption Curves for A50, A65, A75, A80 Engines	3
5	Section Through Hydraulic Tappet	5
6	Cutaway View Showing Gear Train	9
7	Engine On Shipping Crate Cradle	10
8	Hoisting Engine with Lifting Eye	11
9	Hoisting Engine with Crankcase Lifting Eye	12
10	Typical Installation Diagram	13
11	Installation Drawing	14
11a	Installing Drawing	15
12	Ignition Wiring Diagram	22
13	Compressing Valve Springs for Installation and Removal of Locks	26
14	Removal of Hydraulic Unit from Cam Follower Body	26
15	Assembling and Removing Connecting Rods	27
16	Stud Identification	30
17	Assembling Rocker Shaft Bushings	31
18	Installing Cam Follower Body into Crankcase	34
19	Installing Crankshaft Bearings into Crankcase	35
20	Installing and Removing Crankshaft and Connecting Rods	35
21	Installation of Crankcase 1-3 over Crankcase 2-4	36
22	Installation of Gears in Crankcase	37
23	Installation of Crankcase Cover to Crankcase	37
24	Installation of Cylinder on Crankcase	39
25	Determining Firing Position	40
26	Time Rite Instrument In Use	41
27	Lubrication Chart — Cross-sectional View	42
28	Lubrication Chart — Longitudinal View	43
29	Lubrication Chart — Rear View	44
30	Crankcase — Illustrated Parts List	49
30a	New Style Crankcase — Illustrated Parts List	50
31	Crankshaft (Tapered), Connecting Rods and Pistons — Illustrated Parts List	53
31a	Crankshaft (Flange), Connecting Rods and Pistons	55
32	Cylinder and Valves — Illustrated Parts List	57
33	Rear Crankcase Cover and Gear Train — Illustrated Parts List	61
34	Oil Sump and Suction Tube — Illustrated Parts List	63
35	Ignition System — Unshielded — Illustrated Parts List	65
36	Ignition System — Radio Shielded — Illustrated Parts List	67
37	Carburetor, Carburetor Air Intake and Filter System — Illustrated Parts List	69
38	Camshaft, Push Rods, Valve Tappets and Propeller Hub — Illustrated Parts List	71
39	Fuel Injector Equipment — Illustrated Parts List	73
40	Fuel Pump and Oil Cooler Equipment — Illustrated Parts List	76
41	Showing Magneto Timing Markers	88
42	Timing Magneto	88
43	Breaker Mechanism	89
44	Magneto Illustrated Parts	92

CONTINENTAL A50, A65, A75, A80 ENGINES

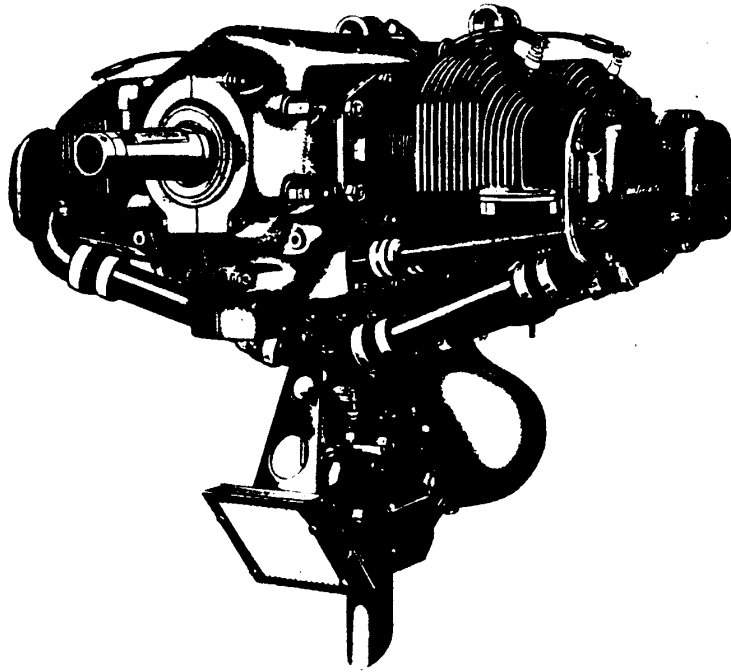


THREE-QUARTER LEFT FRONT VIEW OF A65-8 — *Figure 1*




THREE-QUARTER LEFT FRONT VIEW OF A65-8F — *Figure 1a*

CONTINENTAL A50, A65, A75, A80 ENGINES

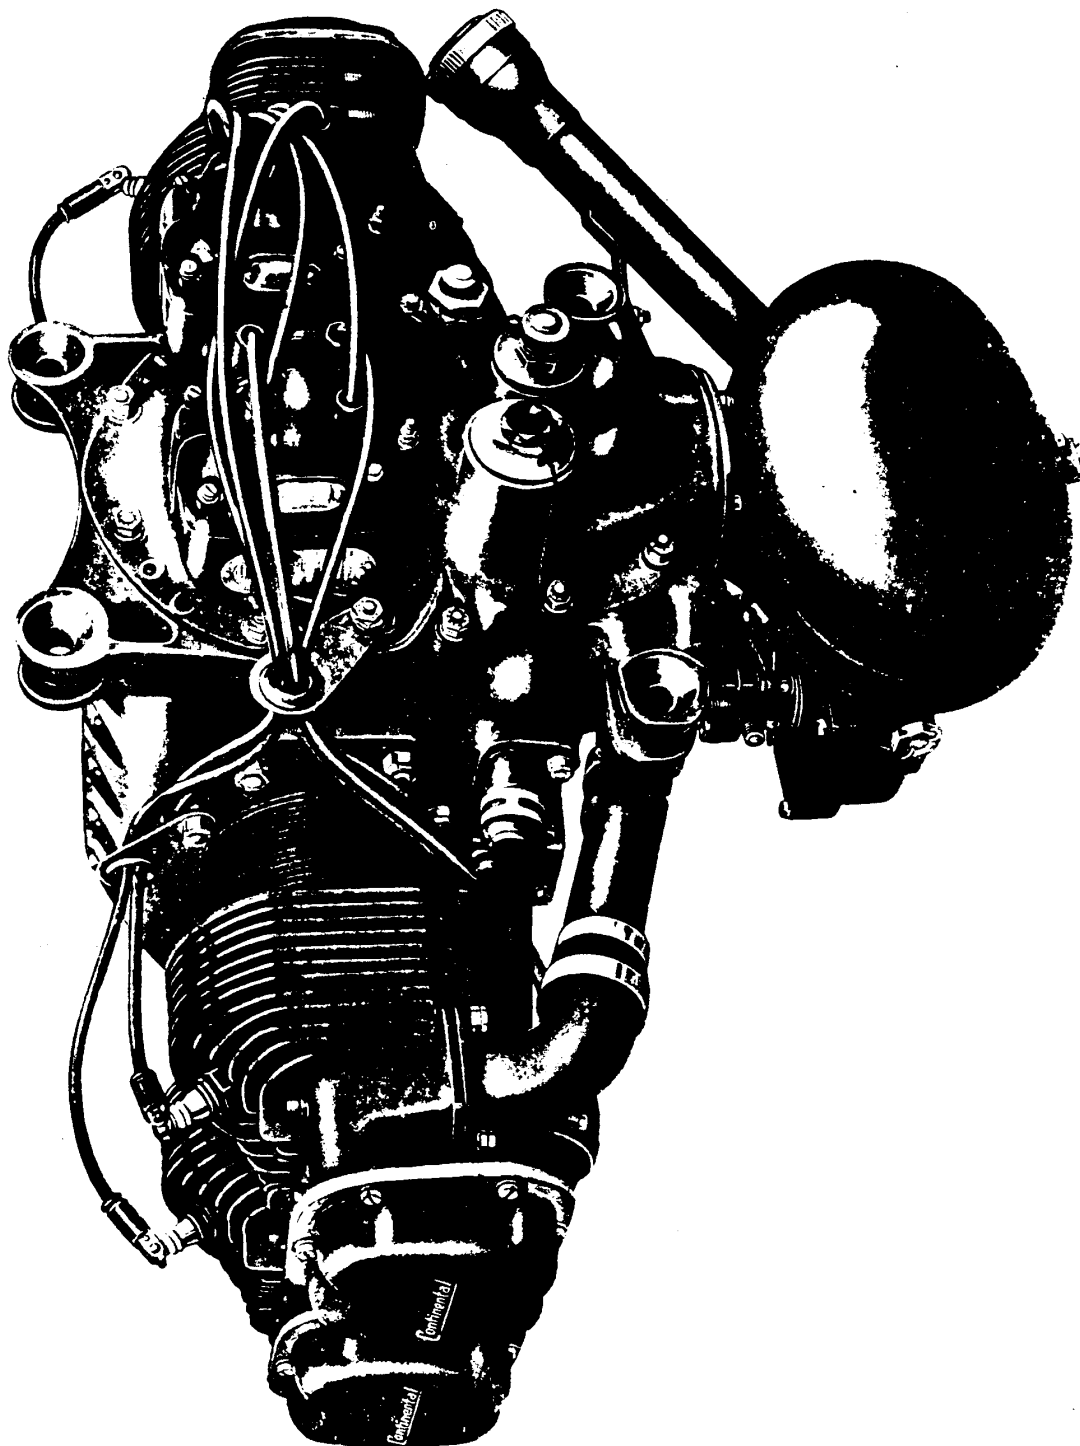


THREE-QUARTER RIGHT REAR VIEW OF A65-8F — Figure 2

CONTINENTAL A50, A65, A75, A80 ENGINES

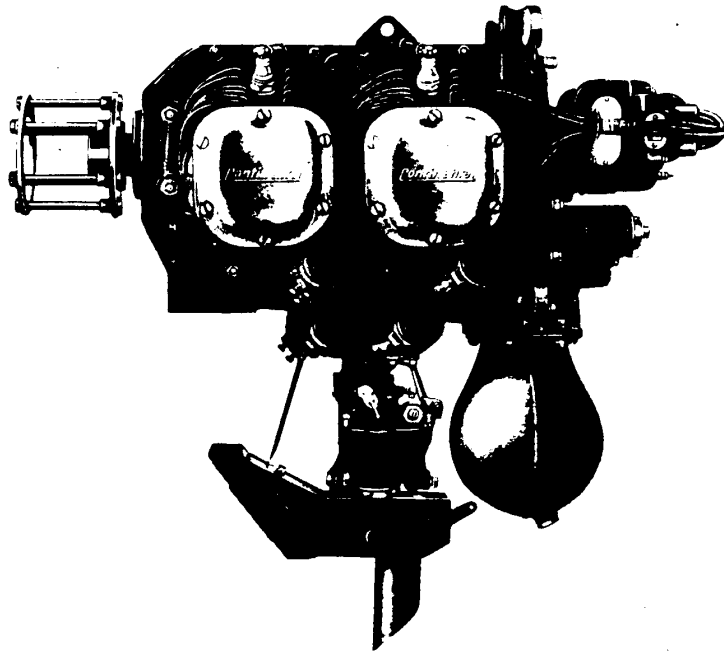

LEFT SIDE VIEW A65-8F — Figure 3

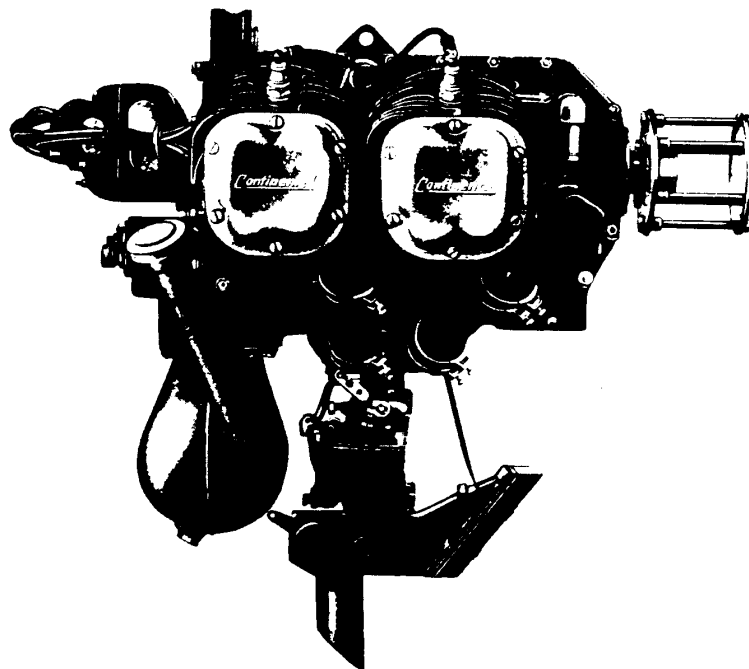

RIGHT SIDE A65-8F — Figure 2