
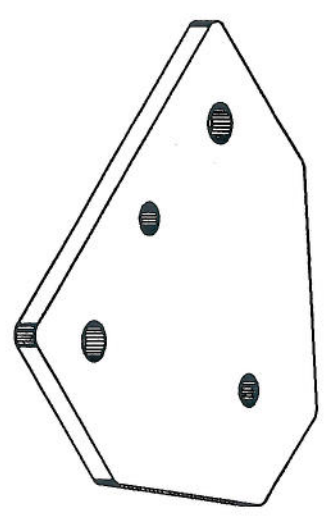


NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: .074 THK 303 STAINLESS			
KENNERIES AVIATION		DMG. NAME	TANG
SCALE	NONE	10-94 RAE	SHEET 1 of 1
			REV -



PART # KA0002

[illegible]

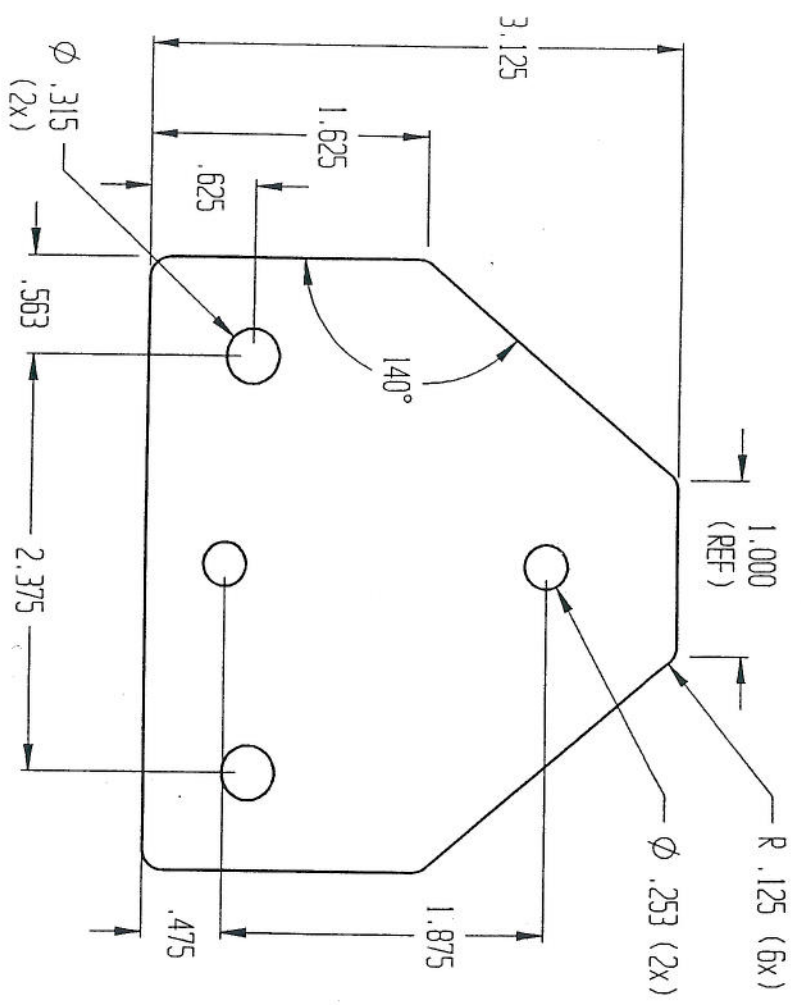

NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: .187 THK 2024 ALUM			
KEMMERIES AVIATION		DWG NAME STRADDLE PLATE	
SCALE	NDNE	10-24 R&E	SHEET 1 of 1
		REV	

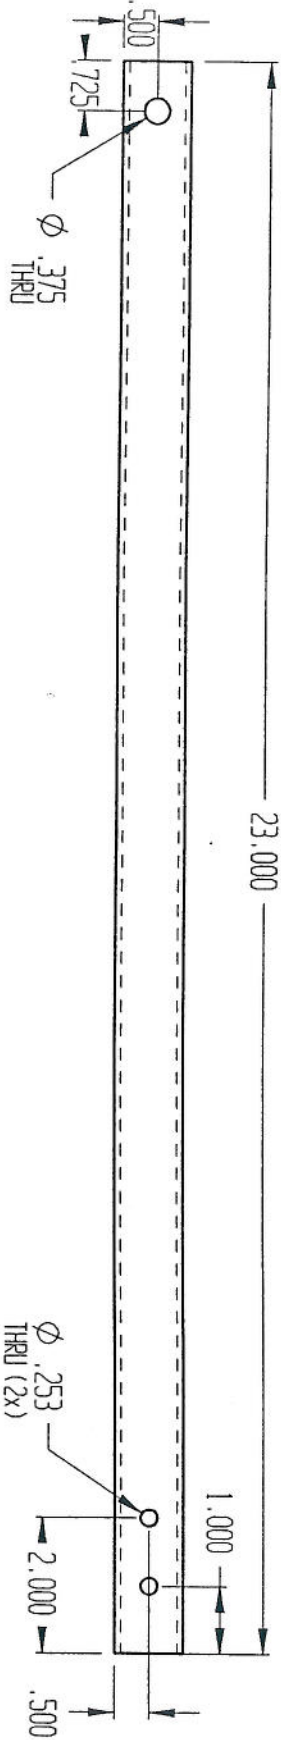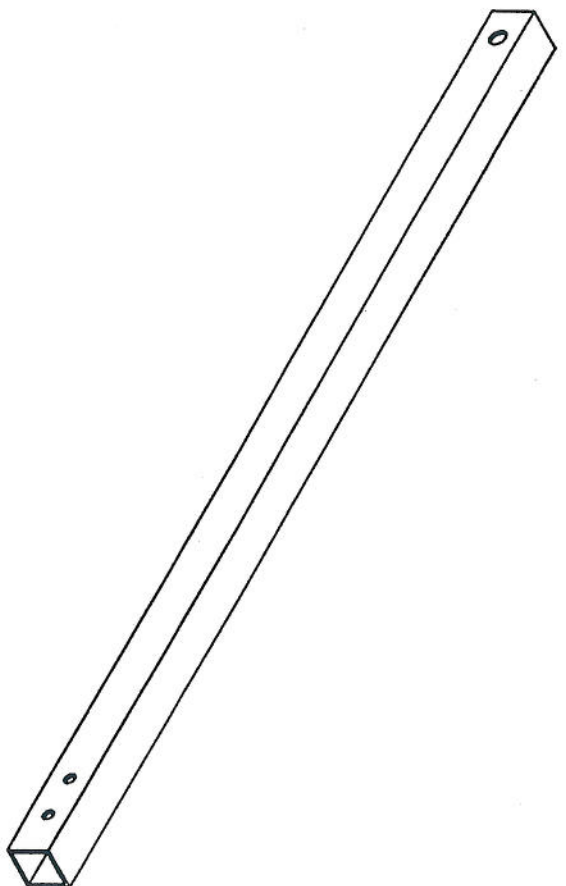

NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: 1 X 1 X .075 WALL 2024-T3 ALUM WITH .060 RADIUS CORNERS

KEENERIES AVIATION

DWG. NAME

UPPER SIDE RAIL

REV



SCALE NONE

10-24 RAE

SHEET

1 of 1

PART # KA2002

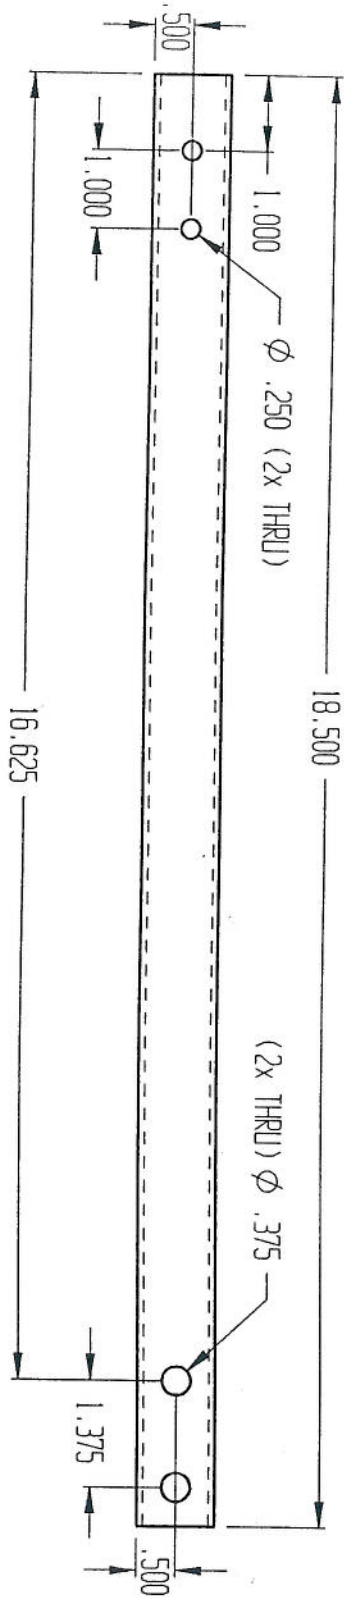
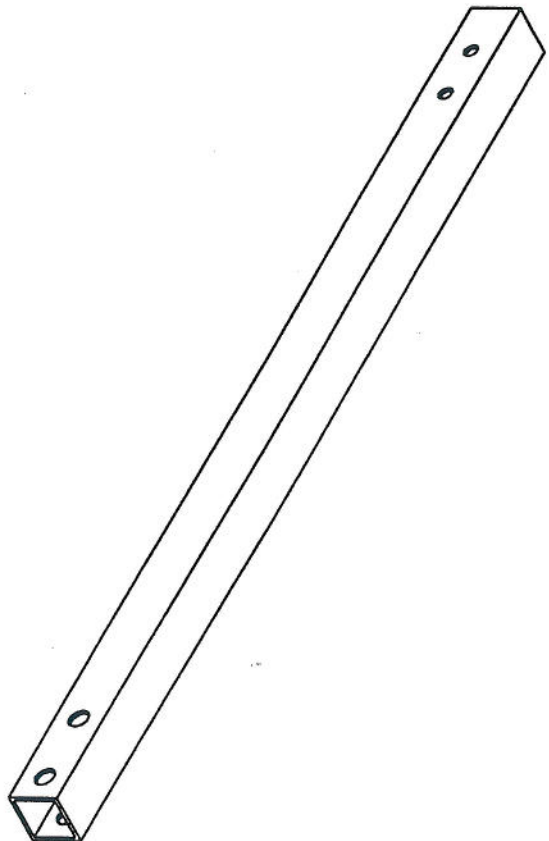


NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: 1 X 1 X .075 WALL 2024-T3 ALUM WITH .060 RADIUS CORNERS

KENNERIES AVIATION		DWG. NAME		LOWER SIDE RAIL		REV
SCALE	NONE	10-24 BAE	SHEET	1 of 1		-

PART # KA2003

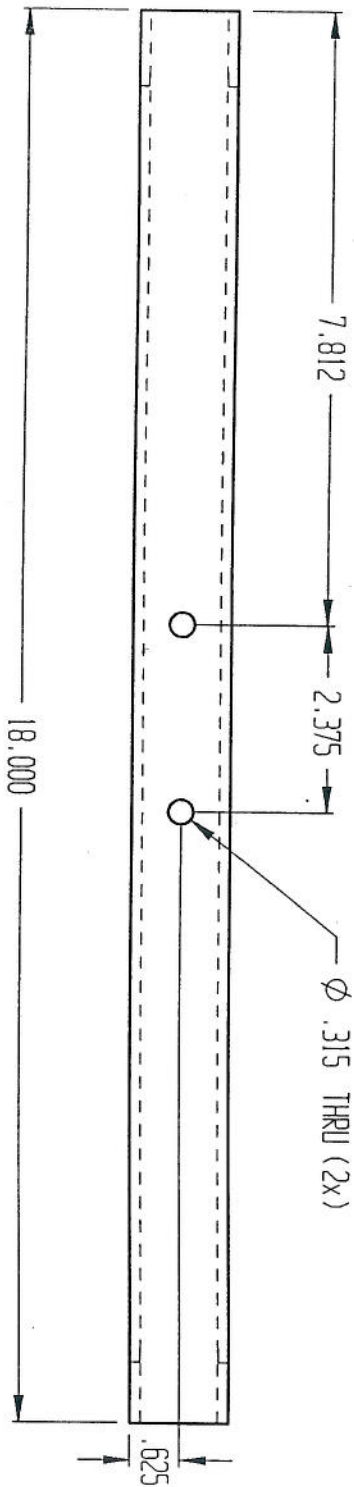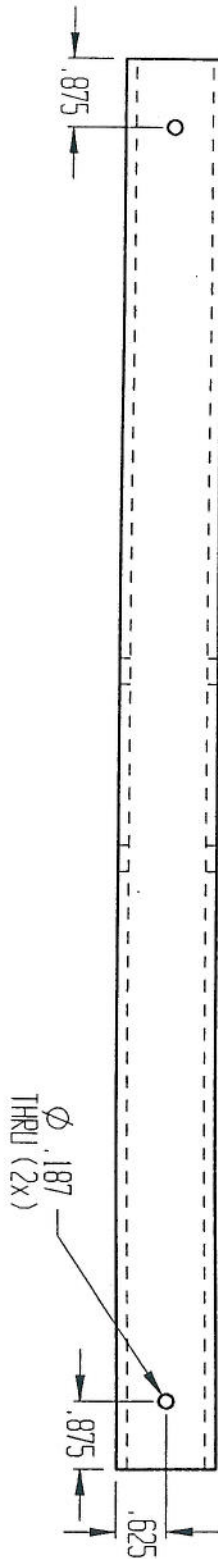





NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: 1.25 SQ. X .125 THK 6061-T6 ALUM TUBE

KEMMERIES AVIATION Dwg. NAME SEAT CROSS RAIL REV



SCALE NONE 10-24 PUE SHEET 1 of 1

PART # KA2004

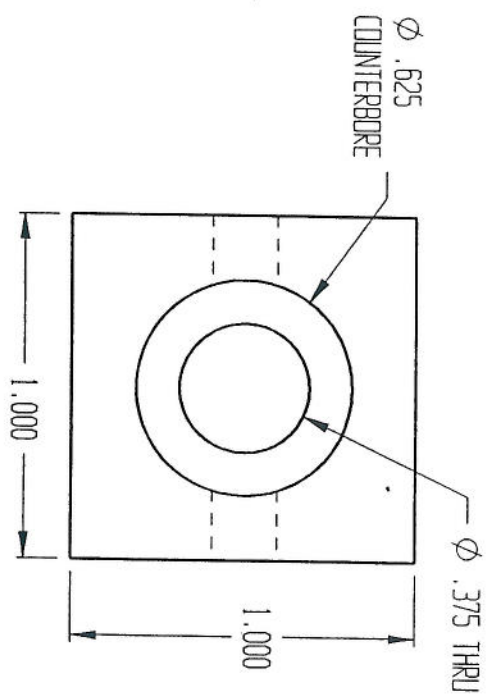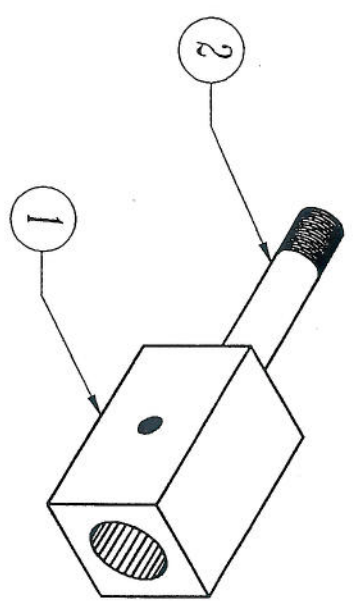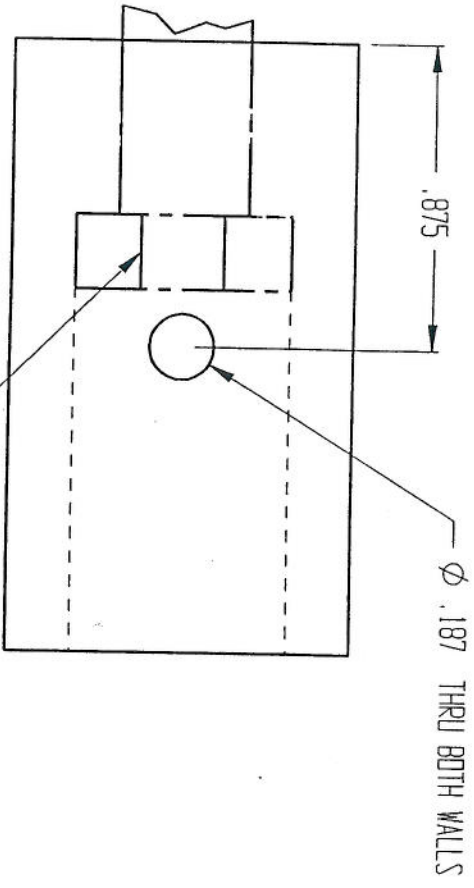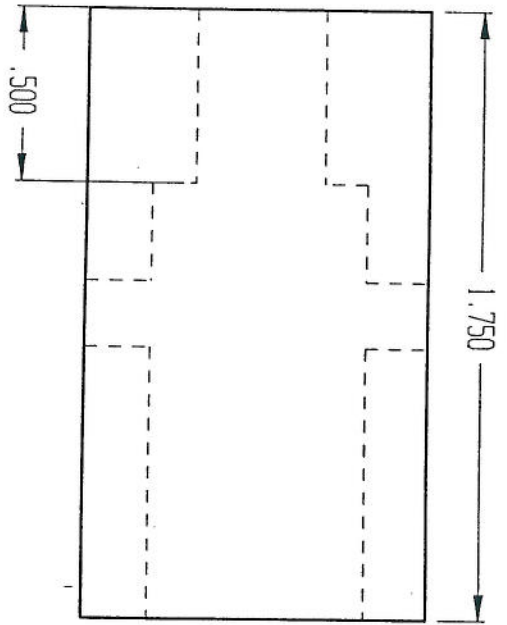

NOTES: REMOVE ALL BURRS AND SHARP EDGES

2	1	ANG-23A BOLT, PIVOT BLOCK
1	1	1.0" S&W 8061-16 ALUM BAR
ITEM	QTY	MATERIAL DESCRIPTION
KENNERIES AVIATION		
DWG. NAME ALUMINUM INSERT		
SCALE NONE		
10-94 R&E SHEET 1 of 1		
REV		



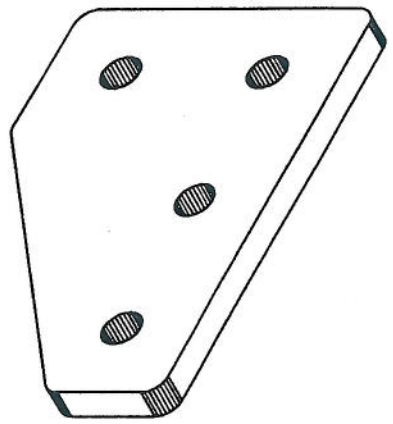
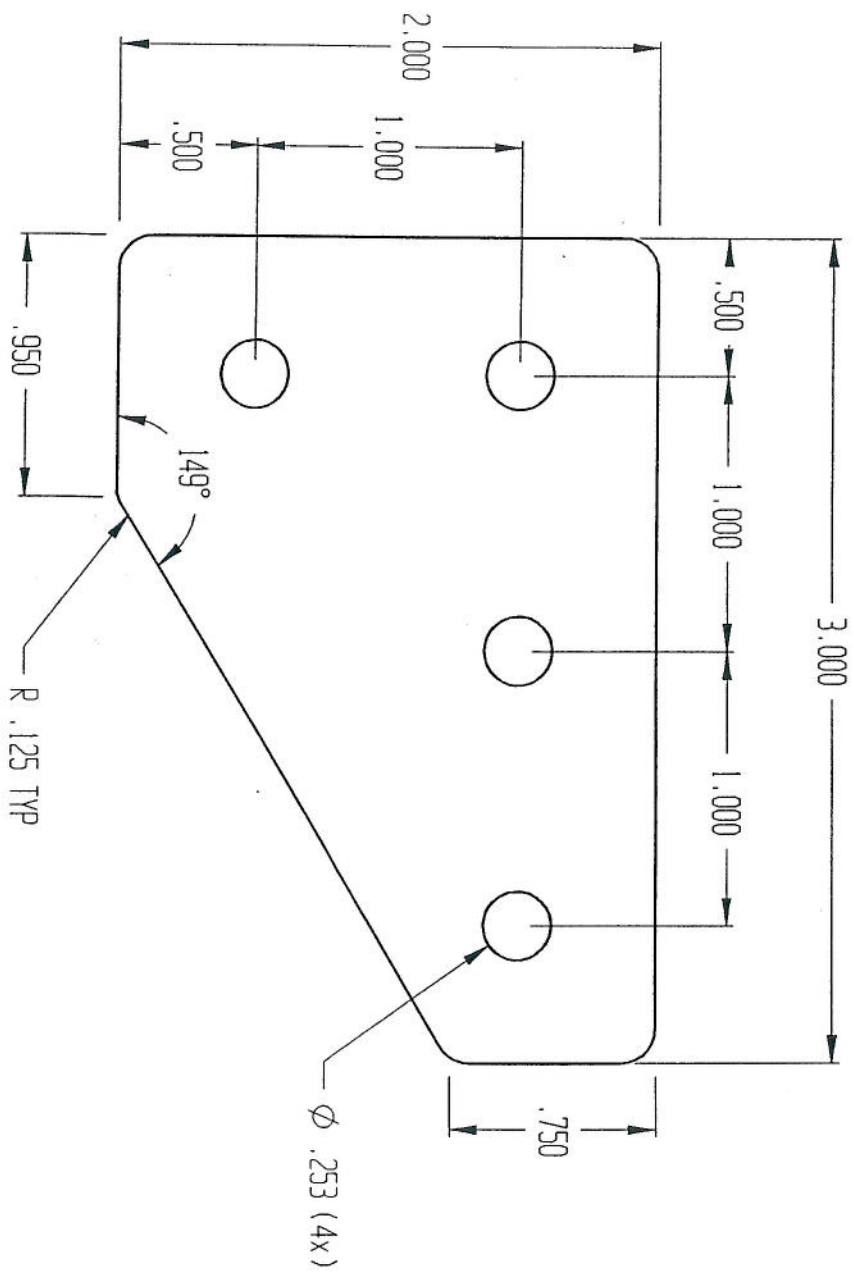


NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: .187 THK 2024 ALUM

KEMMERIES AVIATION		DWG. NAME		HINGE PLATE		REV
SCALE	NONE	10-94 RAE	SHEET	1	of 1	-





PART # KA2006

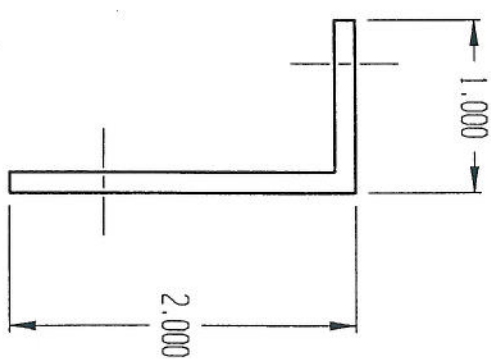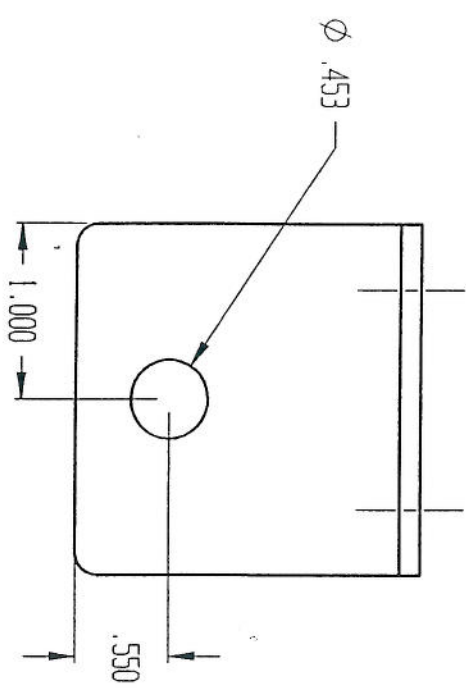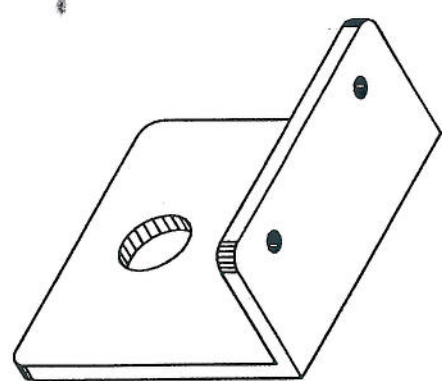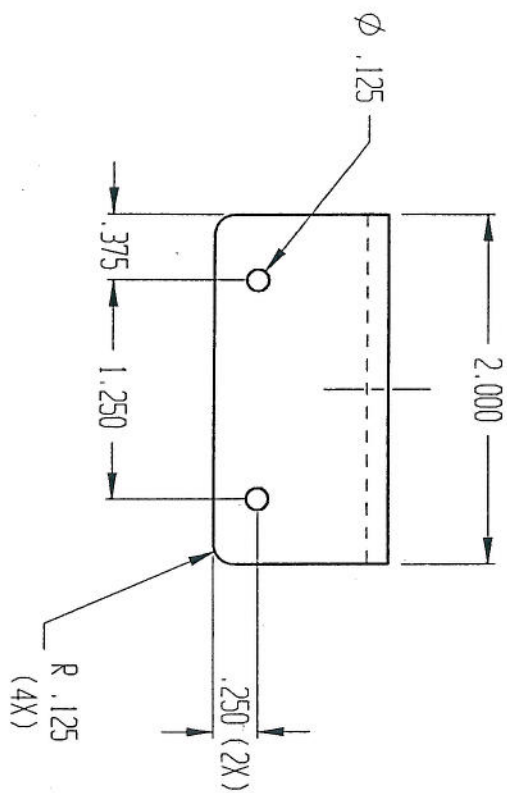

NOTES: REMOVE ALL BURRS AND SHARP EDGES


MATERIAL: 1 X 2 ALUM ANGLE .120 THK			
KEMMERIES AVIATION		DRG. NAME	BRACKET, SWITCH MOUNT
SCALE NONE		10-94 RAC	SHEET 1 of 1
		REV	-

PART # KA2007

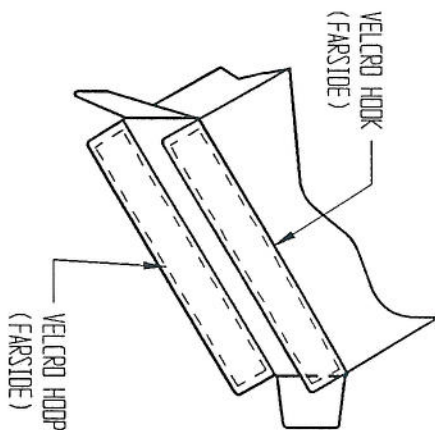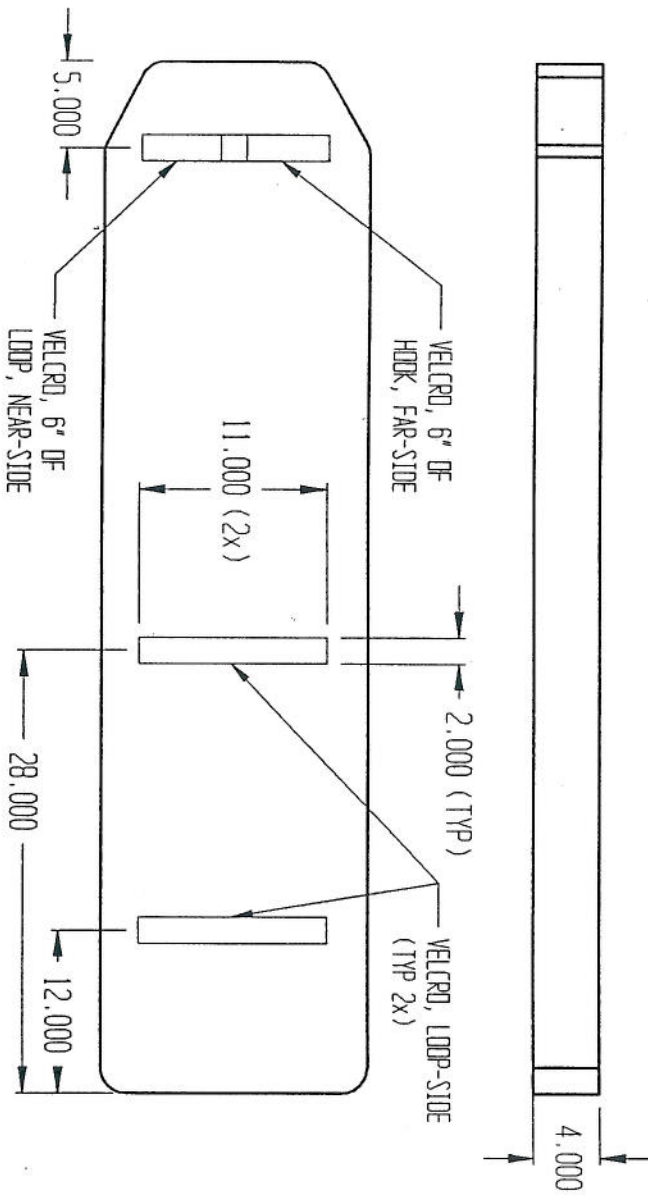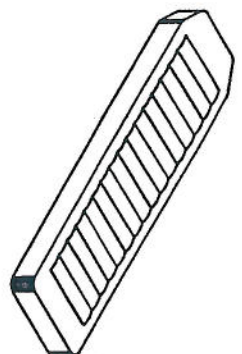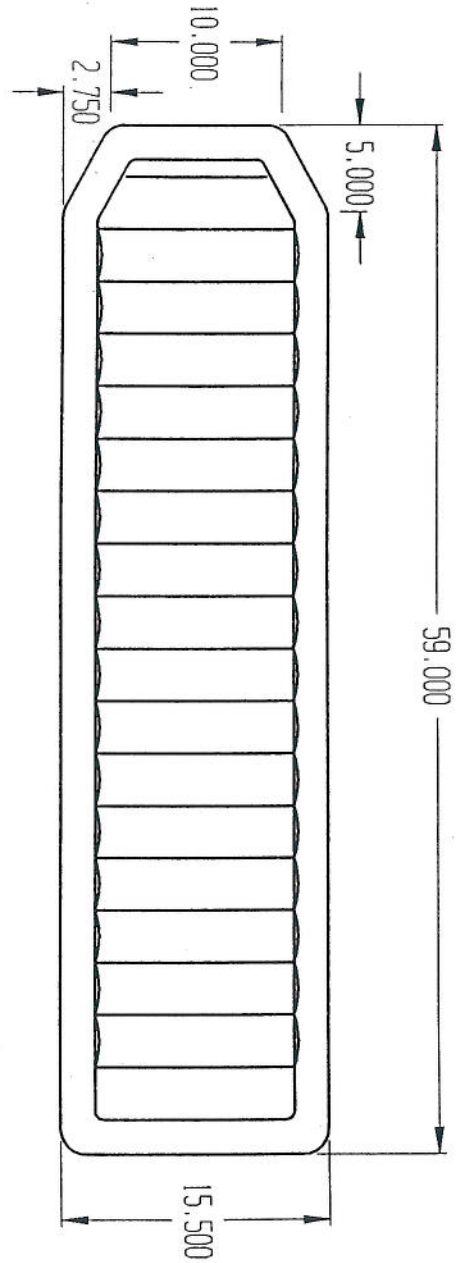

KENNERIES AVIATION		DWG NAME		SEAT CUSHION		REV
SCALE	NONE	10-94 RUC	SHEET	1 of 1		

PART # KA2008

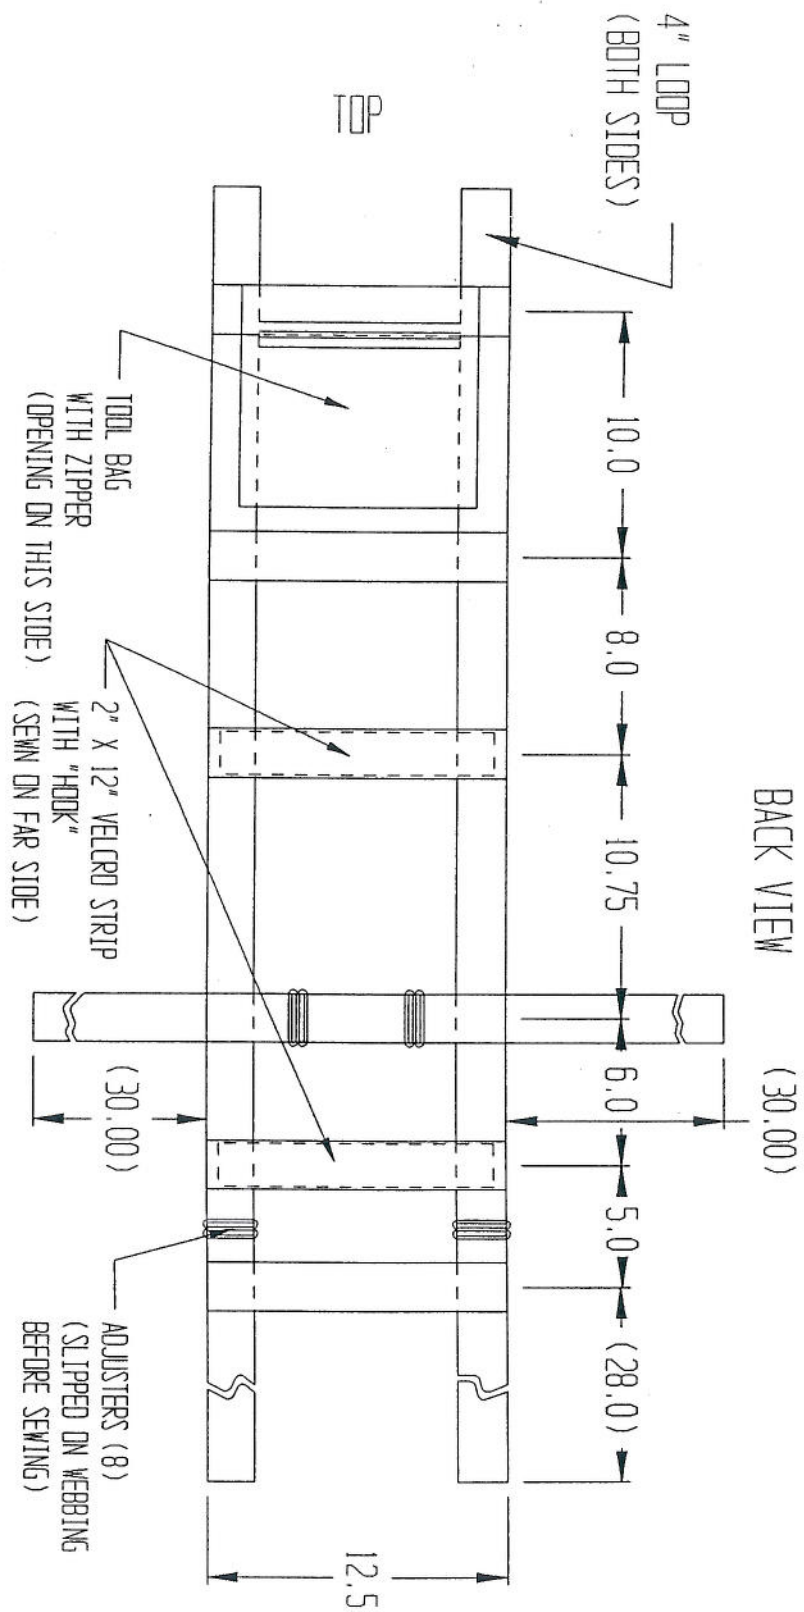

P/N 03300
2" NICKLE PL. SLIDE

MATERIAL: HARNESS IS .050 THK X 2.00 WEBBING

KEMMERIES AVIATION OMC NAME SEAT HARNESS

SCALE NONE

10-94 REC SHEET 1 of 1

REV

PART # KA2009

TUKAN




MOTOR MOUNT ASSEMBLY

KA-3

KA# 3001 TUBE
KA# 3002 SIDE PLATE
KA# 3003 MOTOR MOUNT UPPER
KA# 3004 MOTOR MOUNT LOWER
KA# 3005 MOTOR MOUNT STRUT
KA# 0001 MOUNT BRACKET
KA# 0002 MUFFLER SPRING TANG

COPYRIGHT KEMMERIES 1994

[illegible]

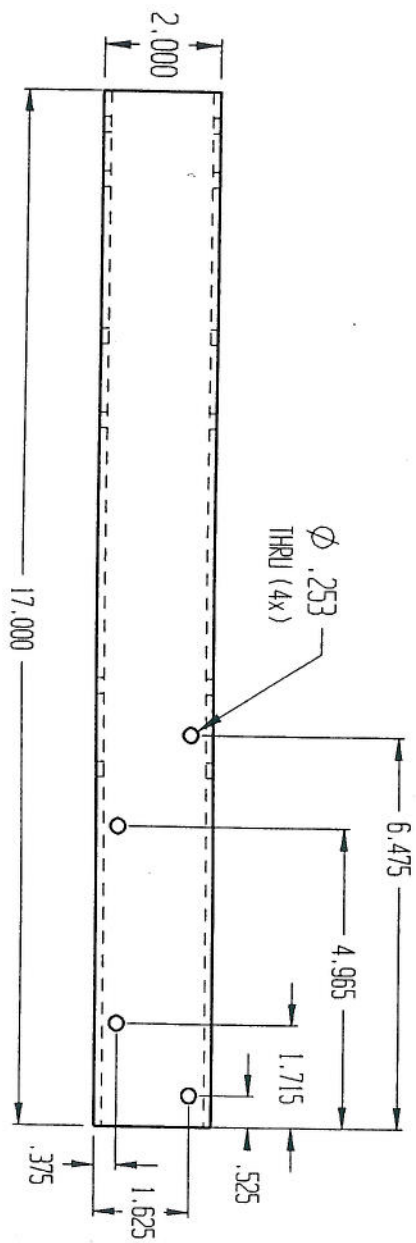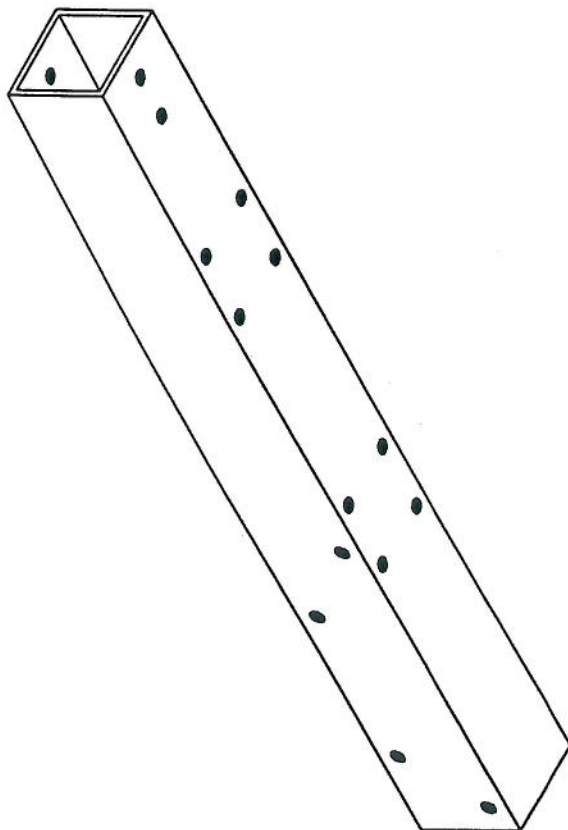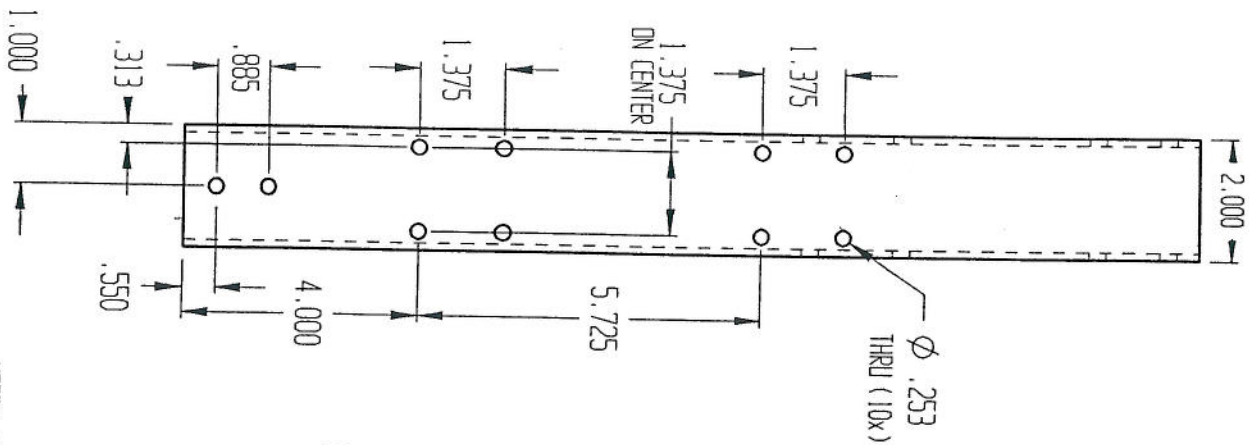

NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: 2.0 X 2.0 X .125 WALL 6061-T6 ALUM TUBE

KEMMERIES AVIATION

DMG. NAME

MOTOR MOUNT TUBE

REV


SCALE NONE

10-94 RAE

SHEET

1 of 1




PART # KA3001

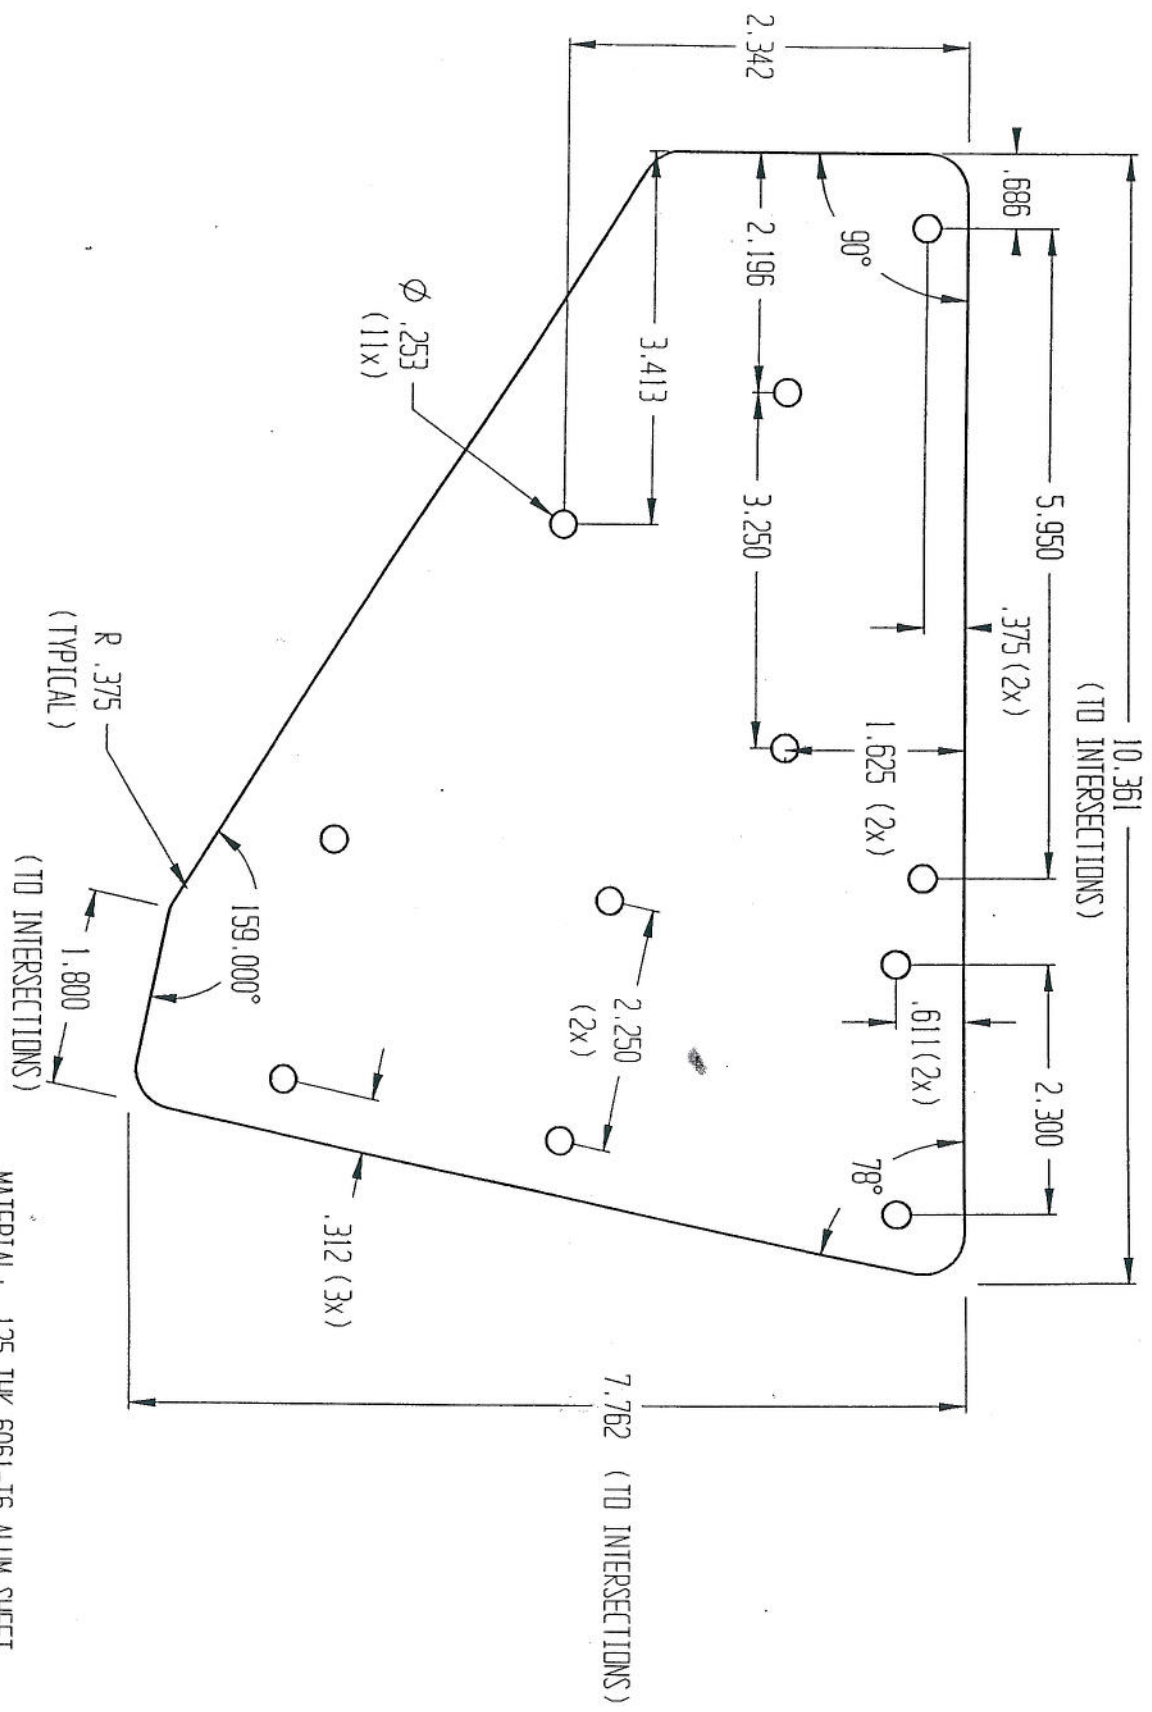

NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: .125 THK 6061-T6 ALUM SHEET




KEMMERIES AVIATION	DWG NAME	SIDE PLATE	REV
SCALE NONE	10-24 RUC	SHEET	1 of 1

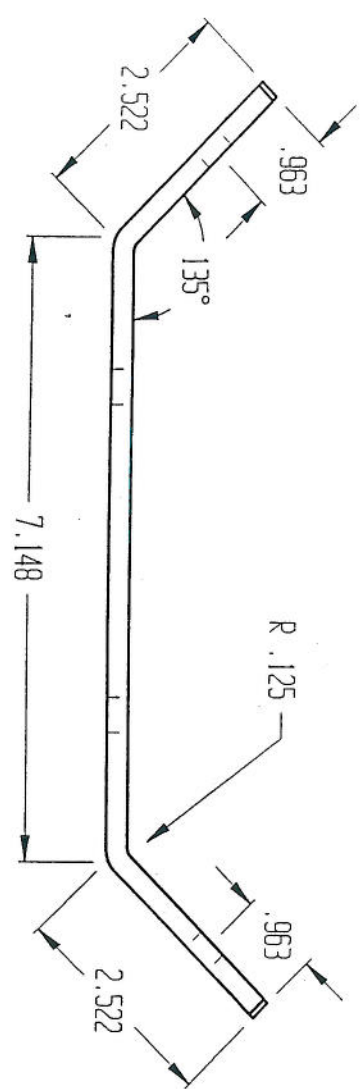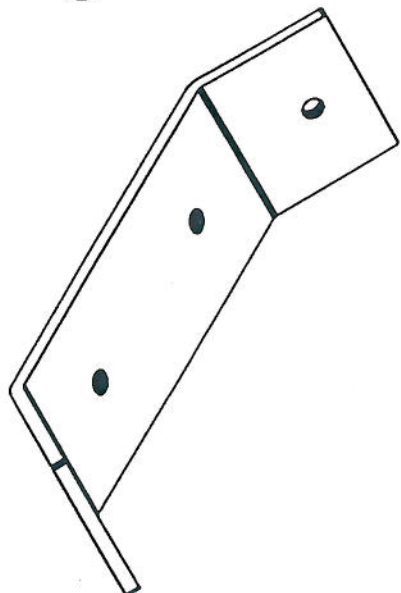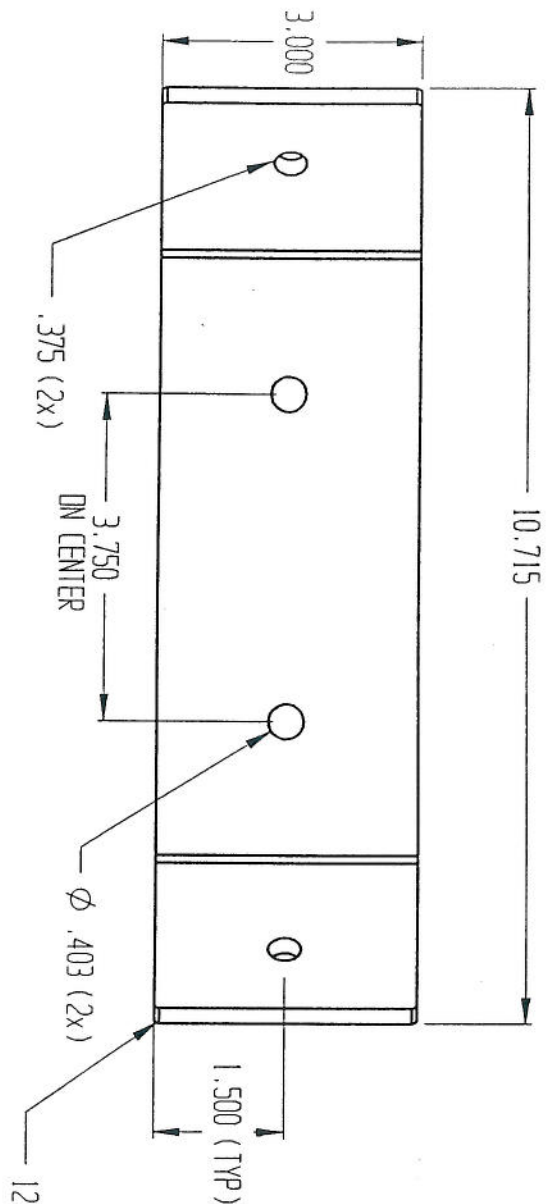

NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: .250 THK 5052-H32 ALUM SHEET

KEMMERIS AVIATION		DMG. NAME	MOTOR MOUNT, UPPER		REV
SCALE	NONE	10-94 R2C	SHEET	1 of 1	-

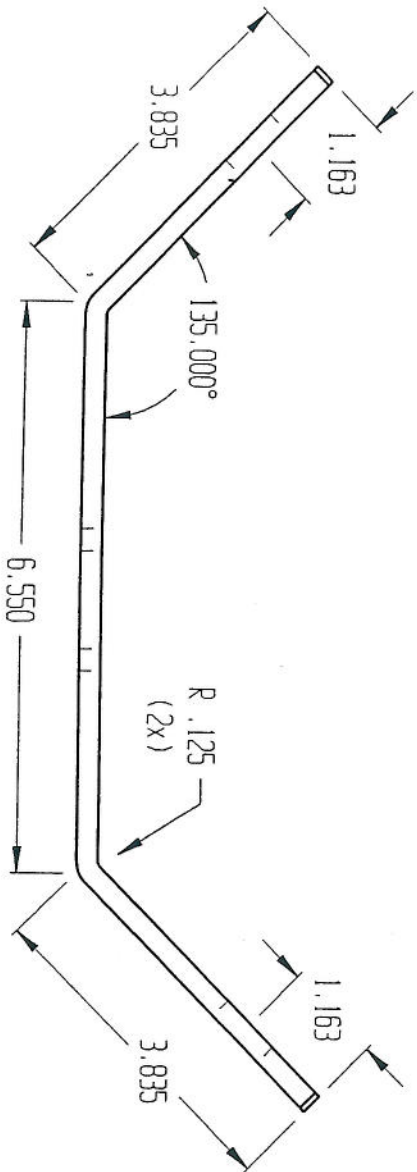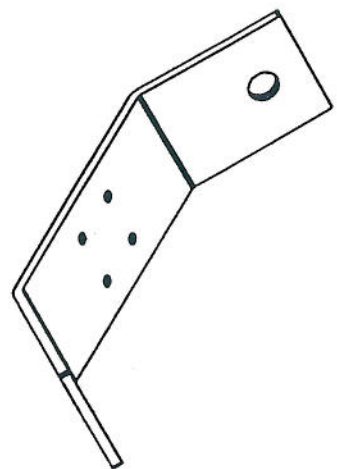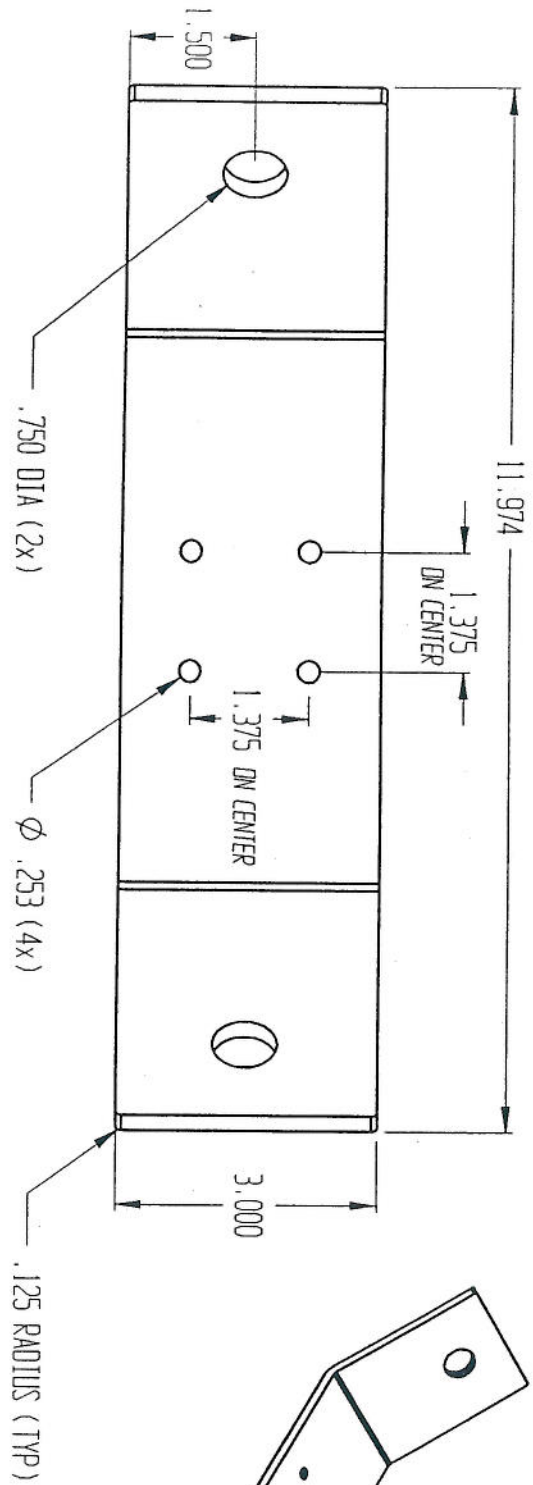


NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: .250 THK 5052-H32 ALUM SHEET

KEMMERIES AVIATION		DWG. NAME		REV	
SCALE NONE		10-94 R&E		SHEET	
1 of 1		MOTOR MOUNT, LOWER		-	

PART # KA3004

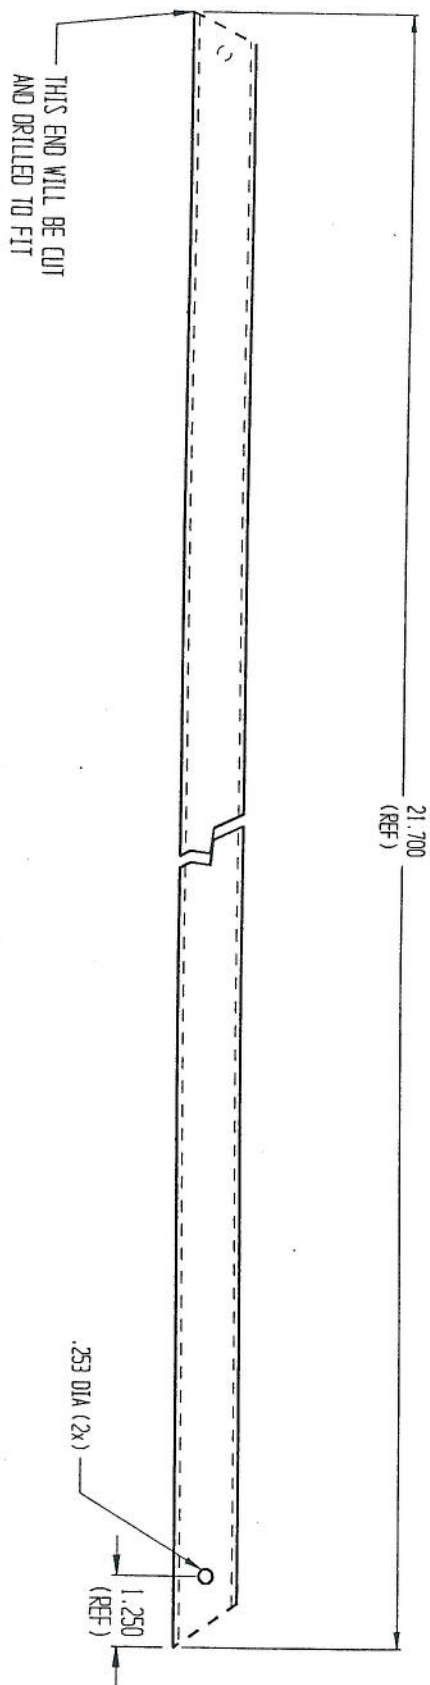

NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: 1 1/8 DIA .095 WALL 6061-T6 ALUM TUBE

KEMMERIES AVIATION

DWG. NAME

MOTOR MNT, STRUT





REV

SCALE NONE

10-94 REF SHEET

1 of 1

PART # KA3005

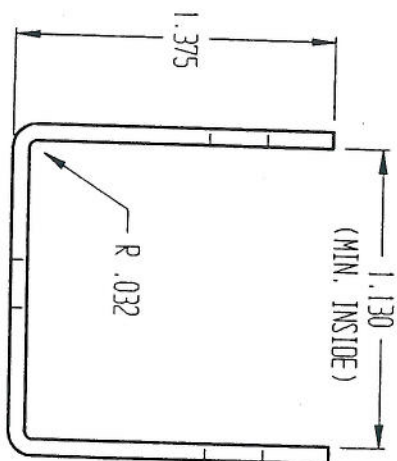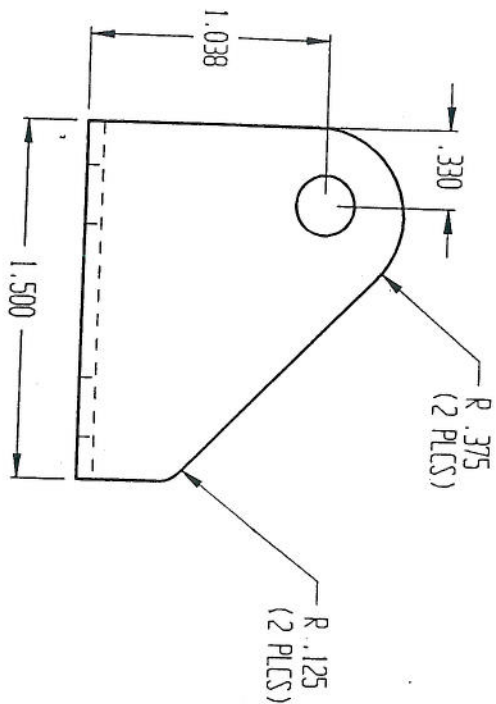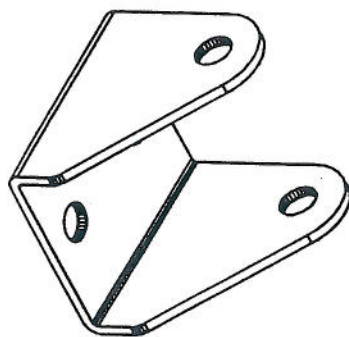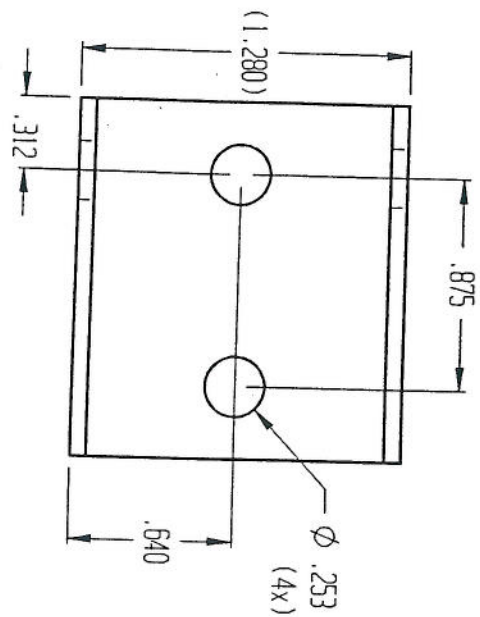

NOTE: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: .075 THK 302/304 #2 FINISH CRES

KEENRIES AVIATION

DWG. NAME

1.125 MOUNT BRACKET


REV

SCALE NONE

SHEET

1 of 1

PART # KA0001

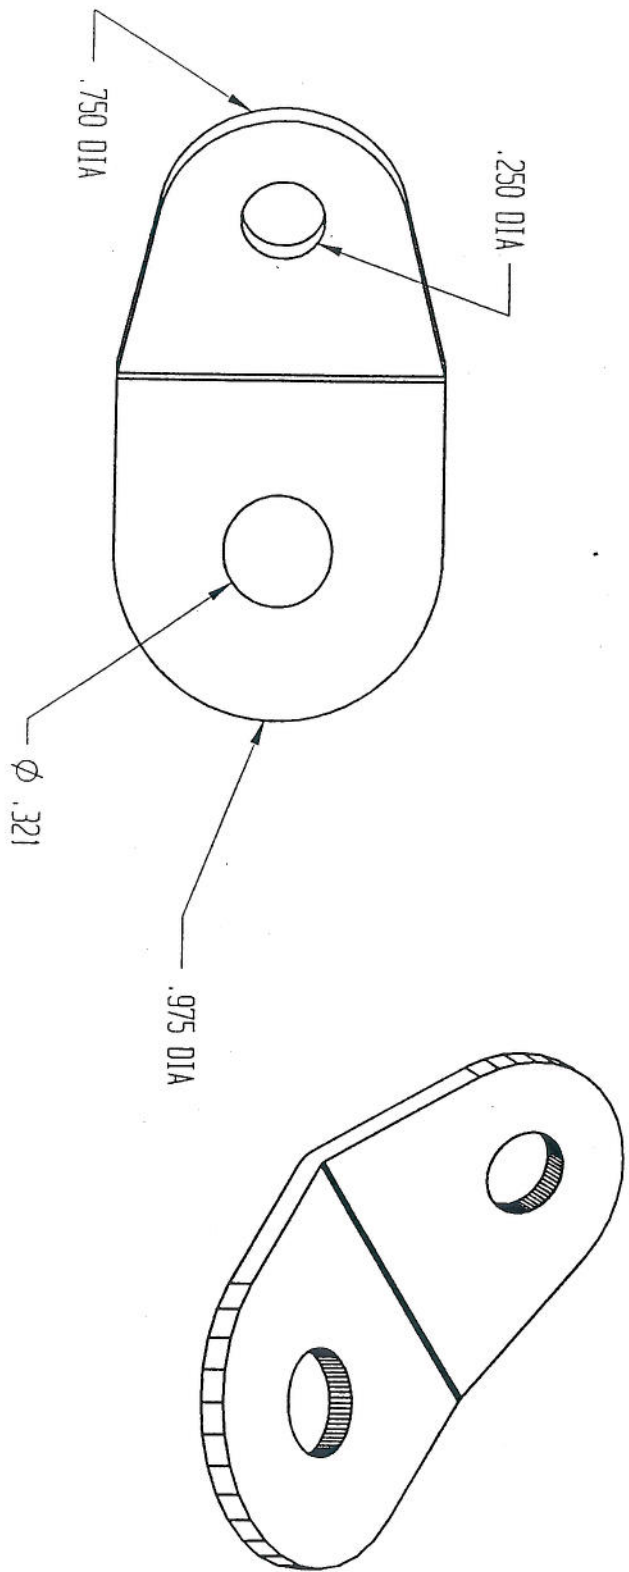

NOTES: REMOVE ALL BURRS AND SHARP EDGES

MATERIAL: .074 THK 303 STAINLESS			
KEMMERIS AVIATION		DRG. NAME	TANG
SCALE	NONE	10-94 BAE	SHEET 1 of 1
		REV	-

PART # KA0002

TUKAN

FORK ASSEMBLY KA-4

KA# 4000 ASSEMBLY

KA# 4001 SHOCK MOUNT

KA# 4002 UPPER LEG, LEFT

KA# 4003 UPPER LEG, RIGHT

KA# 4004 UPPER CROSS BRACE

KA# 4005 CENTER CROSS BRACE

KA# 4006 LOWER LINK

KA# 4007 FORK SUB PARTS

WELDMENT LOWER LINK

WELDMENT 7" FORK

PEDALS

KA# 7013 PEDAL SUB ASSEMBLY

KA# 7014 PEDAL ARM


KA# 7015 BRAKE PEDAL ASSEMBLY

KA# 7016 THROTTLE PEDAL ASSEMBLY

KA# 7017 PEDAL ARM PLACEMENT

BRAKE PEDAL TO FORK ASSEMBLY

THROTTLE PEDAL TO FORK ASSEMBLY

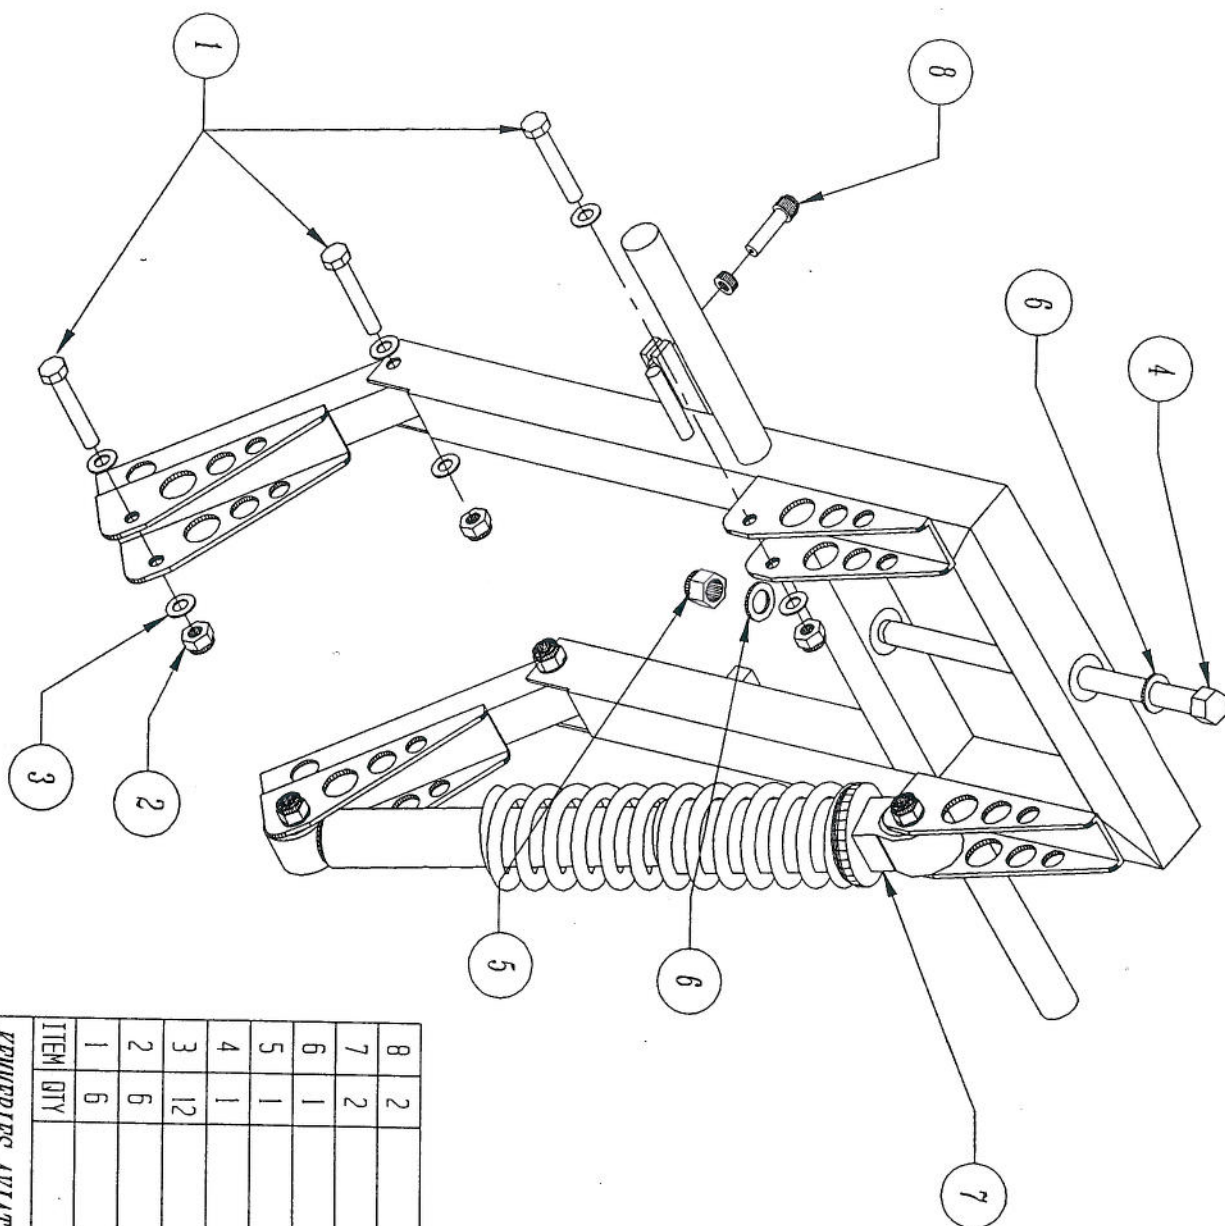

ITEM	QTY	DESCRIPTION
8	2	6 MM CABLE ADJUSTER
7	2	AZUSA SHOCK # 1700-19
6	1	AN360-616 WASHER
5	1	AN365-6 NYLOC NUT
4	1	3/8 X 7.0 BOLT
3	12	WASHER
2	6	AN365-4 NYLOC NUT
1	6	AN4-13A BOLT

SCALE	NONE	10-94 R&E	SHEET	1 of 1
KEMMERLES AVIATION		DWG. NAME		7" FORK ASSEMBLY
		REV		-

ASSY # KA4000